

Technical Bulletin

A technical source for the employees and clients of Osprey Corporation.

Subject: Zippered Media Installation Instructions

Osprey now offers a new zipper closure for all types of Osprey drum filter media and disk media. The new zipper feature will significantly reduce filter maintenance downtime while increasing production efficiency. Customers report media changes take half the time over the traditional media attachment method with no tightening required after installation. Please follow these simple steps or call your local Osprey representative for assistance.

STEP 1

Remove the old filter media from the drum cage sections. If hanging nozzles are used: RAISE the nozzles away from drum cages to provide clearance for installing media. There is a hole in the nozzle mounting bracket for this purpose: Insert a pin through the hole to temporarily hold the swing arm in the raised position. Figure 1



Figure 1 - Drum Cages Without Media

STEP 2

Verify that the Primary and Secondary seals are properly installed. Refer to the Osprey Drum Filter Manual for information on installing the seals. Figure 2



Figure 2 - Drum Seals Installed

STEP 3

Verify that the zip channel COVERS are installed. The zip channels are not used to retain the zippered media, but the covers must be installed to provide a smooth surface for the media. Figure 3



Figure 3 - Zip Channel Covers Installed

STEP 4

Unpack the NEW zippered media for installation. A clean (plastic) sheet should be placed on the floor for the media to rest on.

Osprey Corporation

1835 Briarwood Road
Atlanta, GA 30329 U.S.A.
Ph 404-321-7776
Fax 404-634-1401



STEP 5

Wrap the media around the drum as shown. The start side of the zipper must be on the side **OPPOSITE** the plenum wall. The media 'Pile' must face away from the drum, with the smooth media 'backing' against the drum cage.

- Leave at least 3-5" of media hanging off the end of the drum. The media should **NOT** be flush with the end of the drum.
- On some **LARGER** drum assemblies, it may be easier to utilize the zip strips to temporarily hold one end of the media on the drum, as the drum is rotated to pull the media around. (Be sure to re-install zip covers after this technique is used.) Figure 4



Figure 4 - Media Wrapped on Drum

STEP 6

Pull the ends of the media together, and start zipper. Figure 5



Figure 5 - Starting Zipper

STEP 7

Finish zipping the media across full width of drums. It may be necessary to pull the media ends together as you pull the zipper.

- It is important to keep the media 'square' so that the zipper is parallel to the ground.
- Smooth the media out as you zip. Do **NOT** leave any wrinkles or bulges. Figure 6



Figure 6 - Zipping Media

STEP 8

Install Plenum holding band. At the plenum wall, tuck the media UP and OVER the seal as shown.

- Install the band so that the seal retaining clips firmly press the seal against the plenum wall. Figure 7



Figure 7 - Media tucked over Seal

STEP 9

Install Center and End bands. As you install the bands, verify that they CLEAR the nozzles, and will NOT INTERFERE with the nozzles when the drum rotates. Figure 8

STEP 10

Set nozzle to media Gap. Adjust nozzle support assemblies to achieve a 3/8" gap between the drum filter media and the face of the nozzle.

- Refer to the Drum Filter Manual for instructions on setting this gap.

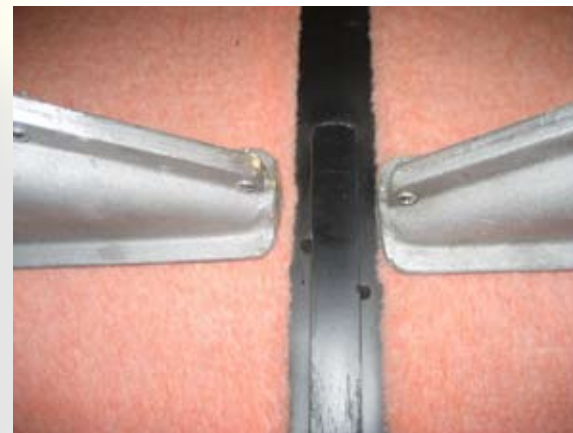


Figure 8 - Holding Bands Installed

STEP 11

Verify that the media is properly installed.

- The media must be flat and not have wrinkles or bulges.
- All holding bands must be TIGHT and CENTERED between nozzles. Verify that bands and band clamps will NOT interfere with nozzles as drum rotates.
- The zipper seam should be straight & parallel to floor.
- Verify the nozzle to media GAP is correct (3/8").



Figure 9 - Zippered Media Installed

Contact Us

Osprey Corporation

1835 Briarwood Road, NE
Atlanta, GA 30329
Phone: 404-321-7776
Fax: 404-634-1401

Marsha Vice (Customer Service)

E-mail: marsha.vice@ospreyfilters.com
Phone: 404-320-2354

Steve Smith (Sales)

E-mail: steve.smith@ospreyfilters.com
Phone: 404-320-2352

Kirk Harpole (Sales)

E-mail: k.harpole@ospreyfilters.com
Phone: 404-679-9880

Marty Price (Sales and Product Development)

E-mail: martin.price@ospreyfilters.com
Phone: 404-320-2349

Ivan Skott (Sales)

E-mail: ivan.skott@ospreyfilters.com
Phone: 404-679-9892

David Ankenbrandt (Sales)

E-mail: david.ankenbrandt@ospreyfilters.com
Phone: 404-320-2341

Oliver Smyth (Sales)

E-mail: osmyth3@bellsouth.net
Phone: 334-263-9200

Christoph Ritter (Sales Manager Europe and Middle East)

E-mail: c.ritter@ospreyfilters.com
Phone: 33-492-62-63-47

Dave Colburn (Technical Service Manager)

E-mail: david.colburn@ospreyfilters.com
Phone: 404-320-2344

Jeff Orwig (Spare Parts Sales Manager)

E-mail: jeff.orwig@ospreyfilters.com
Phone: 404-320-2347

Isacque Nixon (Spare Parts Sales)

E-mail: isacque.nixon@ospreyfilters.com
Phone: 404-320-2355

Sean Wallace (Controller)

E-mail: sean.wallace@ospreyfilters.com
Phone: 404-679-9879

Todd Dietz (Engineering Manager)

E-mail: todd.dietz@ospreyfilters.com
Phone: 404-679-9882

Ken Best (Operations)

E-mail: ken.best@ospreyfilters.com
Phone: 404-320-2359

Johnny Harrell (Logistics)

E-mail: johnny.harrell@ospreyfilters.com
Phone: 404-427-1515

Plastics Representatives

Chris Strzelecki – Southeast USA

E-mail: chris@plastequip.com
Phone: 678-428-9261
Fax: 678-455-8548

Rob Northrup – Southeast USA

E-mail: rob@plastequip.com
Phone: 678-428-9261
Fax: 770-242-1386

Andrew J. Haesler – DE, MD, NJ, PA, NY, VA (Northern), USA

E-mail: ajhinc@aol.com
Phone: 212-673-7740
Fax: 212-217-9566
Cell: 917-744-8052

Jeff Opad – IL, MN, WI, USA

E-mail: jeff@jemmco.com
Web Site: www.jemmco.com
Phone: 262-512-9559
Fax: 262-242-0432
Cell: 262-488-3061

Bob Fasulo – AR, LA OK, TX, USA

E-mail: fasulo@flash.net
Web Site: www.kaalco.com
Phone: 972-250-6762
Fax: 972-250-0250
Cell: 972-740-0696

Dave Lawson – Canada

E-mail: dlawson@spectranet.ca
Web Site: www.ice-equipment.com
Phone: 416-717-1846
Fax: 416-717-1847

Eduardo Koch G. – Mexico

E-mail: gekonorm@avantel.net
Phone: 52-5-556-833908
Fax: 52-5-556-684871

Soft Disposables Offices and Representatives

Tecnoeuropa S.A. de C.V. – Mexico

Jaime Cattori
E-mail: jcattori@tecnoeuropa.com.mx
Phone: 52-55-5020-5070

Osprey Assessoria – Brazil

Paulo Roberto Nascimento Borba

E-mail: prnborba@uol.com.br
Phone: 55-12-3672-2000
Fax: 55-12-3672-3449

Dougmac Pty. Ltd. – Australia and New Zealand

Bruce MacGregor, Doug MacGregor
E-mail: email@dougmac.com.au
Phone: 61-2-9791-9644
Fax: 61-2-9791-9677

Moritani & Co. Ltd – Japan, Korea and China

Ando Hiroyuki

E-mail: ando.hiroyuki@moritani.co.jp
Phone: 81-3-3278-6273